

**1 YEAR**  
WARRANTY



# Ω OMEGA™ User's Guide



## **OM-HL-EH-TC Series Multi-channel Handheld Thermocouple Temperature Data Logger**

# Table of Contents

<b>Section .....</b>	<b>Page</b>
<b>Section 1 Introduction .....</b>	<b>1</b>
1.1 Introduction .....	1
1.2 Features .....	1
1.3 Applications .....	1
1.4 Series Data Logger Model .....	1
1.5 Temperature Data Logger Appearance .....	2
1.6 Temperature Data Logger Screen .....	2
1.7 Button function instructions .....	3
<b>Section 2 Installation and Instruction .....</b>	<b>4</b>
2.1 Software Installation .....	4
2.1.1 The Requirement of the Computer Hardware .....	4
2.1.2 Install Driver & Software.....	4
2.2 How to Read and Configure the Logger .....	5
2.2.1 Read and Configure the Logger's Settings .....	5
2.2.2 Setting Parameters Description .....	6
2.3 Turn On/Off Logger & Start/Stop Logging .....	7
2.4 Download the Logging Data .....	9
2.5 View Data Sheet .....	10
2.6 Exporting Logs from LogPro .....	10
2.7 Delete Records in the Logger .....	11
2.8 Check the Save File in File List .....	11
<b>Section 3 Attention .....</b>	<b>12</b>
<b>Section 4 FAQ .....</b>	<b>12</b>
4.1 LCD Screen Dim .....	12
4.2 Data & Time Error .....	12
4.3 Software "Runtime Error" .....	12
4.4 Check COM Port Number .....	12

## Section 1 - Introduction

OM-HL-EH-TC thermocouple temperature data logger is a kind of high precision instrument, developed and manufactured by OMEGA company, which have pass all strict calibrations and professional testing via high precision instrument. Support 8 types thermocouples(K、J、E、T、R、S、N、B), including thermocouple temperature compensation function and can measure temperature from -200 to 1800 °C.

### Section 1.2 - Features

- LCD screen which can display data from 8 channels simultaneously.
- Switchable °C/°F temperature units.
- Low battery indication.
- MAX, MIN and HOLD mode for all channels.
- Concise appearance, high precision, and reliable performance.
- Desktop and wall-mounted.
- Accompanied by powerful software with a concise interface.
- Match professional analysis software.
- Battery can work for 3 months.  
( collect one data each minute, record one data 5 minutes)

### Section 1.3 - Application

- Monitor temperature in factories, laboratories, storage house, refrigerators.
- Non-contact infrared surface temperature measurements in hard to reach areas such as heating and air conditioning ducts.


**NOTE:**

There are no user serviceable parts inside your unit. Attempting to repair or service your unit may void your warranty.

### Section 1.4 - Data Logger Model


Model	Temperature Range	Resolution	Accuracy	Work Environment	Capacity of Records
OM-HL-EH-TC	-200 ~ 1800°C -328 ~ 3272°F	0.1°C 0.1°F	0.8±2‰°C	0~80%RH 0~50°C	86,000

## Section 1.5 - Temperature Data Logger Appearance

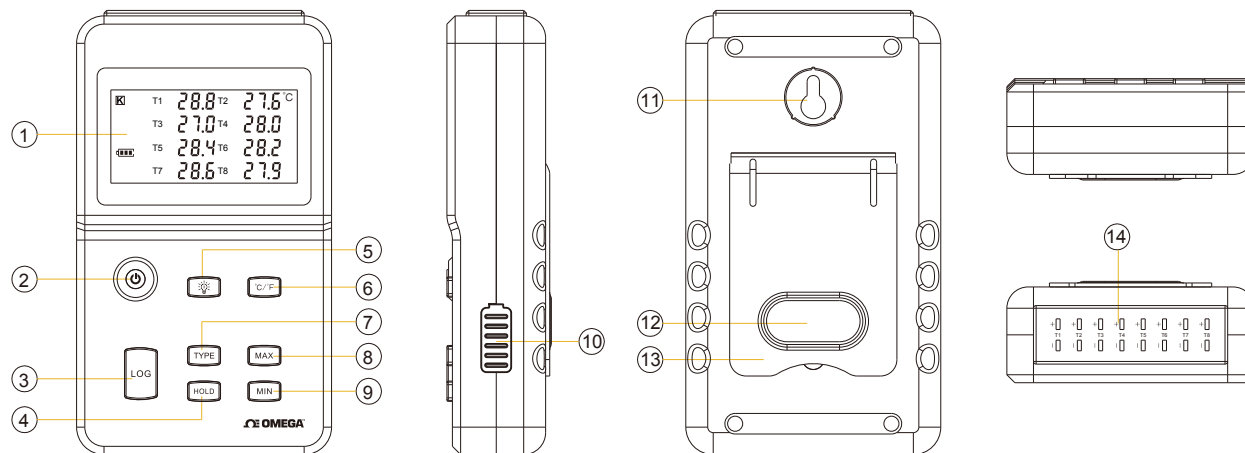





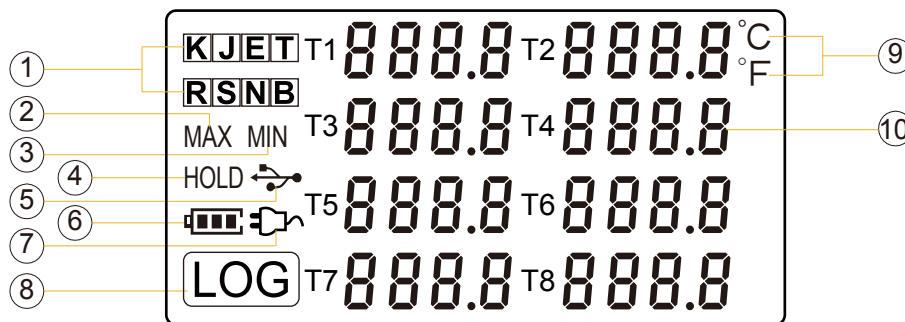



- |  |  |
|--|--|
| <ol style="list-style-type: none"> <li>1. LCD Screen</li> <li>2. Power On/Off</li> <li>3. LOG: Recording function button</li> <li>4. HOLD: Lock the Value.</li> <li>5. Screen Backlight</li> <li>6. °C/°F Switch</li> <li>7. TYPE: Switch for type of Sensor (K、J、E、T、R、S、N、B).</li> </ol> | <ol style="list-style-type: none"> <li>8. MAX: Displaying maximum recorded value for all channels</li> <li>9. MIN: Displaying minimum recorded value for all channels</li> <li>10. USB &amp; 9V DC power interface</li> <li>11. Wall-mount hole</li> <li>12. Battery Cover</li> <li>13. Back Stand</li> <li>14. Thermocouple Sensor Interface</li> </ol> |
|--|--|

## Section 1.6 - Temperature Data Logger Screen



- |   |  |
|---|--|
| <ol style="list-style-type: none"> <li>1. Thermocouple Sensor Type: K、J、E、T、R、S、N、B</li> <li>2. MAX: Logger running in maximum value mode.</li> <li>3. MIN: Logger running in minimum value mode.</li> <li>4. HOLD: Display is held.</li> </ol> | <ol style="list-style-type: none"> <li>5. USB wire is connected between logger and computer</li> <li>6. Battery level</li> <li>7. DC Adapter (9V) connected</li> <li>8. LOG: logger is recording</li> <li>9. Temperature Unit: °C or °F</li> <li>10. Temperature display area</li> </ol> |
|---|--|

## Section 1.7 - Button function instructions

-  : Power ON/OFF  
(1) When logger power is off, push this button will turn on the logger.  
(2) When logger power is on, push this button will turn off the logger.
-  : Recording Function  
(1) When logger power is on, press this button, the LCD screen will show “LOG” a sign which indicates that the logger is recording data.  
(2) Press the button for 3 seconds will put the logger in standby mode.  
(3) The screen will display “FULL” symbol when storage space is full.
-  : Switchover Button of °C and °F
-  : Backlight Button  
Press this button to open the backlight, and press again to close the light.
-  : Maximum Lock Button  
Press this button once LCD shows “MAX” sign, which indicates that the logger is recording maximum value for all channels; Press again to exit this mode.
-  : Minimum Lock Button  
Press this button once LCD shows “MIN” sign, which indicates that the logger is recording minimum value for all channels; Press again to exit this mode.
-  : Thermocouple Sensor Type Switch Button  
Support 8 types of thermocouple sensors: J、K、E、T、R、S、N、B and press to switch between different types of sensors.
-  : Measured Values Keeping Button  
Press this button once, and the LCD screen will display “HOLD” sign which indicates that the logger will keep the just measured value until the button is pressed again.

## Section 2 - Installation and Instruction

This section will explain how to use the software to upload, read, configure and synchronize the settings, how to turn on/off the logger & enter/exit the logging mode, and how to delete and download the logging data.

### Section 2.1 - Software Installation

#### 2.1.1 - The Requirement of the Computer Hardware

1. OS: Windows XP/Vista/8/10 (32/64-bit).
2. CPU: 1.6GHz.
3. Physical Memory: 512MB.
4. Hard-drive Space: 4 GB.
5. USB Port: 1.


#### 2.1.2 - Install Driver & Software

Note: "If need to install Driver separately, please install 64-bit driver for Windows 64-bit computer & 32-bit driver for Windows 32-bit computer".


1. Install LogPro Software and Driver together(Default Path: C:\OM-HL Logger).
2. Installation Steps: When entering the software, click the 'Install LogPro and Driver' (as below Pic ), and then click the 'Next '(5 times), click the 'Install,' click the 'Finish.' When entering the LogPro software interface, the installation driver software window will pop up. Click 'Install,' and the success of installation will be displayed.




LogPro installation page

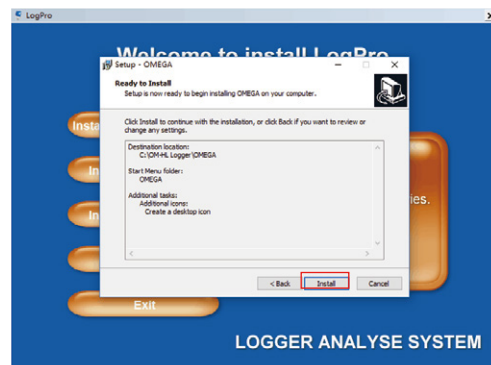

Default installation folder

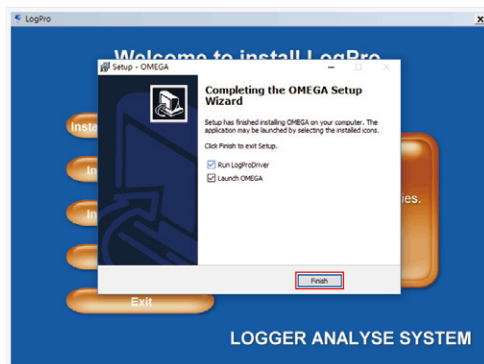

The successful installed

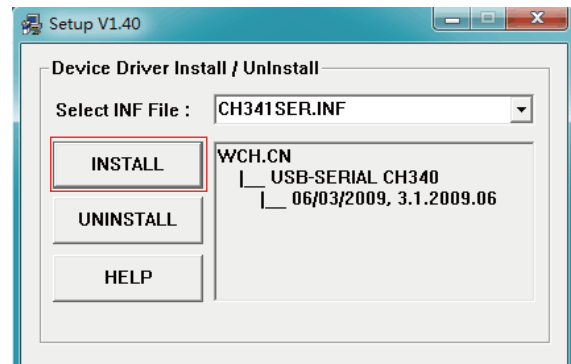


Install driver

## Section 2.2 - How to Read and Configure the Logger

### 2.2.1 - Read and Configure the Logger's Settings

1. Turn on and Insert the data logger to the computer<sup>1</sup>.
2. Start LogPro software on the PC.
3. From the toolbar select Connect.
4. Load & Read the logger's current settings.
5. Configure the new settings.
6. Sync the settings & time. (The PC time will be synchronized to the logger as well.) .
7. From the toolbar select disconnect.
8. Sync the Computer's Data & Time to the Data Logger.
9. Unplug the logger from the computer, and then the logger is in Standby mode.

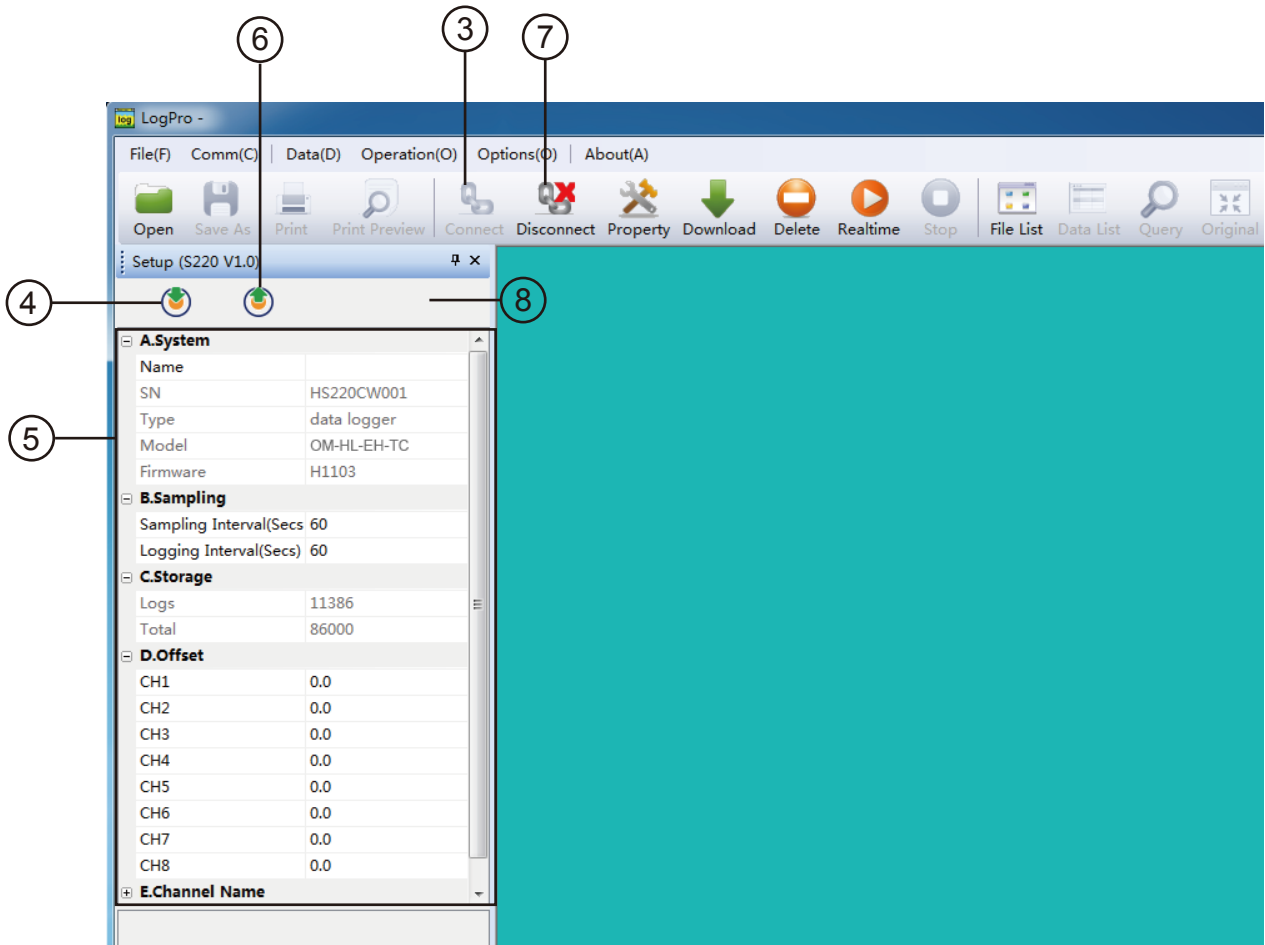

1. The Windows® operating system cannot handle USB devices being unplugged and plugged back too fast. When unplugging the logger, wait for about 5 seconds before plugging it in again. If you unplug and plug back a device too quickly, the computer may stop recognizing any USB devices on that port. If this happens, you will have to restart the computer. This is a Windows® USB problem and is not related to LogPro.

## 2.2.2 - Setting Parameters Description

<b>A.System</b>	
Name	LOGGER
SN	HE20143200
Type	Data Logger
Model	OM-HL-EH-TC
Firmware	H1103
<b>B.Sampling</b>	
Logging Interval (Secs)	10
Sampling Interval (Secs)	60
<b>C.Storage</b>	
Logs	0
Total	86000
<b>D.Offset</b>	
CH1	0.0
CH2	0.0
CH3	0.0
CH4	0.0
CH5	0.0
CH6	0.0
CH7	0.0
CH8	0.0


<b>E.Channel Name</b>	
Name1	1
Name2	2
Name3	3
Name4	4
Name5	5
Name6	6
Name7	7
Name8	8

Setting Parameter	Text	Description
Name	English letters or numbers	Name of the logger
SN	10 characters	Must be the same as the one in the label of logger
sampling Interval (secs)	Number from 1 to 240	Sampling frequency in LCD screen
Logging Interval (secs)	Number from 2 to 86400	Logging frequency
Logs	Number from 0 to 86000	The count of records in the memory
Total	Number 86000	The total capacity of the logger's storage
Offset	Calibration mode: For example, pls fill in 1.5 if the displayed temperature is higher than the actual temperature of 1.5 °C; fill in -1.5 if the displayed temperature is lower than the actual temperature of 1.5 °C. If you need to adjust the humidity, do the same, the number field is -100~100.	Input positive number to decrease the value.input negative number to increase the value.
Channel Name	English Letters or Numbers	Name of each channel


Calibrate the logger: The logger is factory calibrated to an accuracy given in the device specifications. However, there may be times when you wish to adjust the calibration of your logger. Logpro provides you with the ability to perform a single point offset calibration. This calibration can be used to increase the accuracy of the logger for a restricted data range.

## Section 2.3 - Turn On/Off Logger & Start/Stop Logging Under Button to Start Mode


**Turn On the Logger** - Push "ON / OFF" Button for pressing the switch button momentarily then LCD display is on.

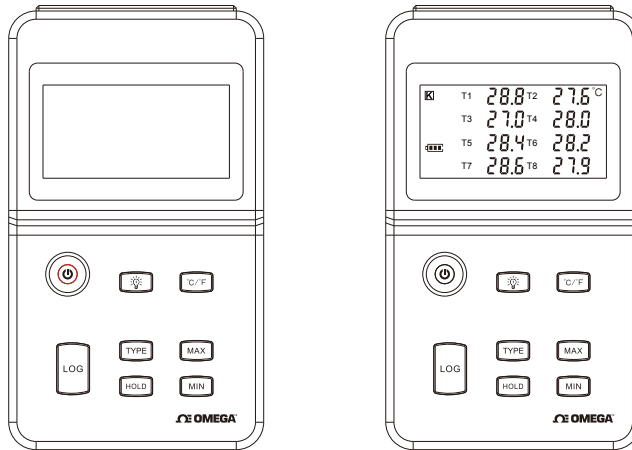


**Start Logging** - When the Logger is on and on stand-by (LCD does not have "LOG" logo display), press "LOG" button, LCD has "LOG" logo display, now the logger start logging and storing data.

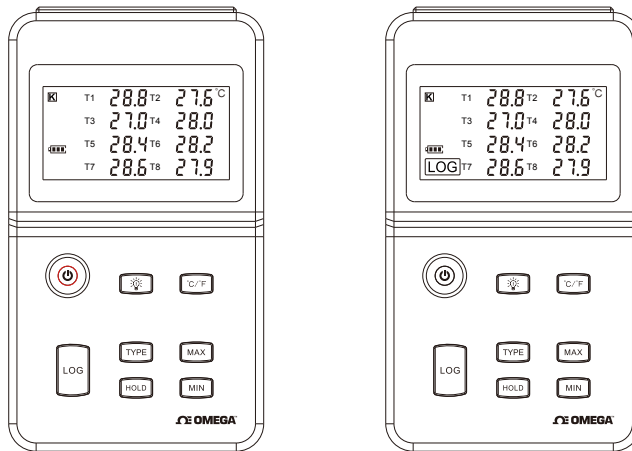


**Stop Logging** - When the Logger is on logging, long press "LOG", LCD display countdown time, loosen "LOG" button when countdown time finished, then the instrument switch from logging to standby state.

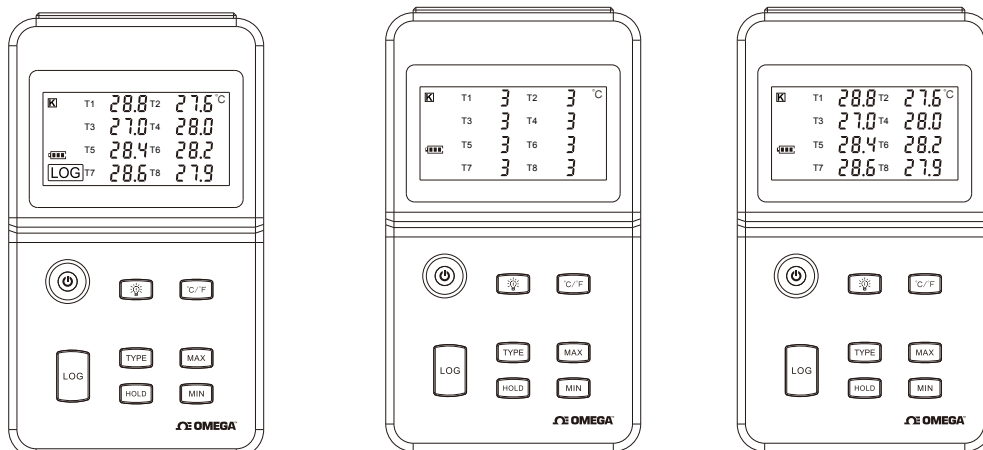


**Turn Off the Logger** - Push the "ON / OFF" Button for short pressing then LCD display is off.

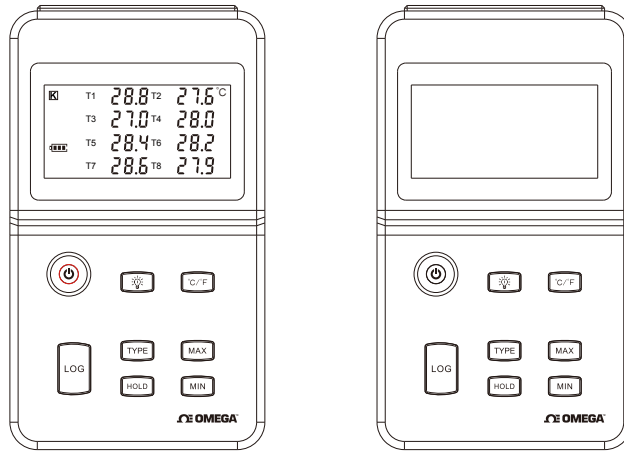

**LOG Full** -The device won't record data while the memory is full, that you have to download the data and delete it by Logpro software, then device can record again.

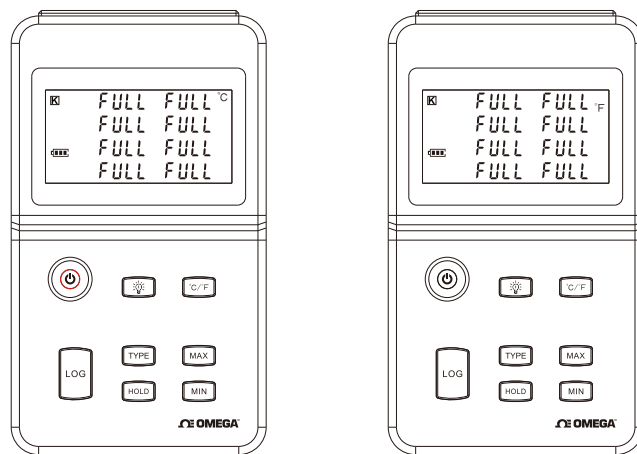


**Switchable °C or °F** - Press the "°C/°F" key shortly When instrument records data in degrees (the LCD displays the °C symbol), and the instrument switches to Fahrenheit as the recording unit display data (the LCD displays the °F symbol). It Can Switch back and forth between °C and °F as you Press this button repeatedly.

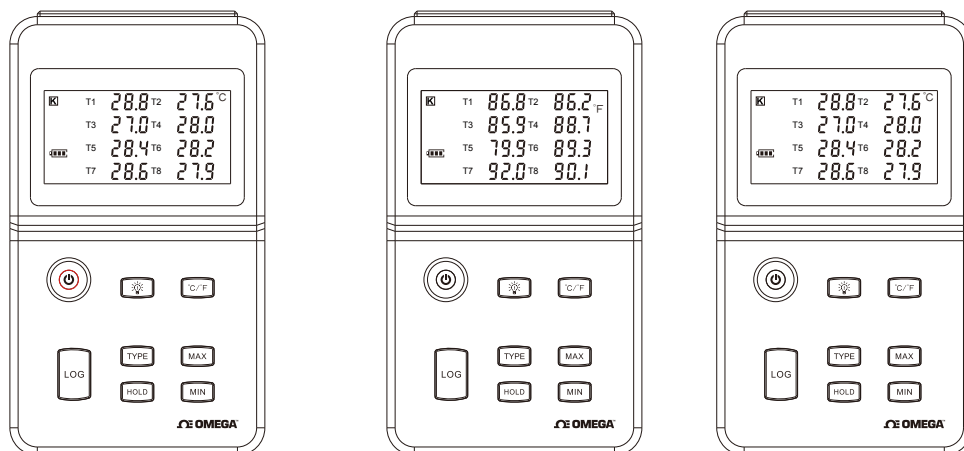


## Section 2.4 - Download the Logging Data

10. Connect the data logger through USB cable into the computer.
11. Start LogPro software on the PC.
12. From the toolbar select Connect.
13. From the toolbar select Download.

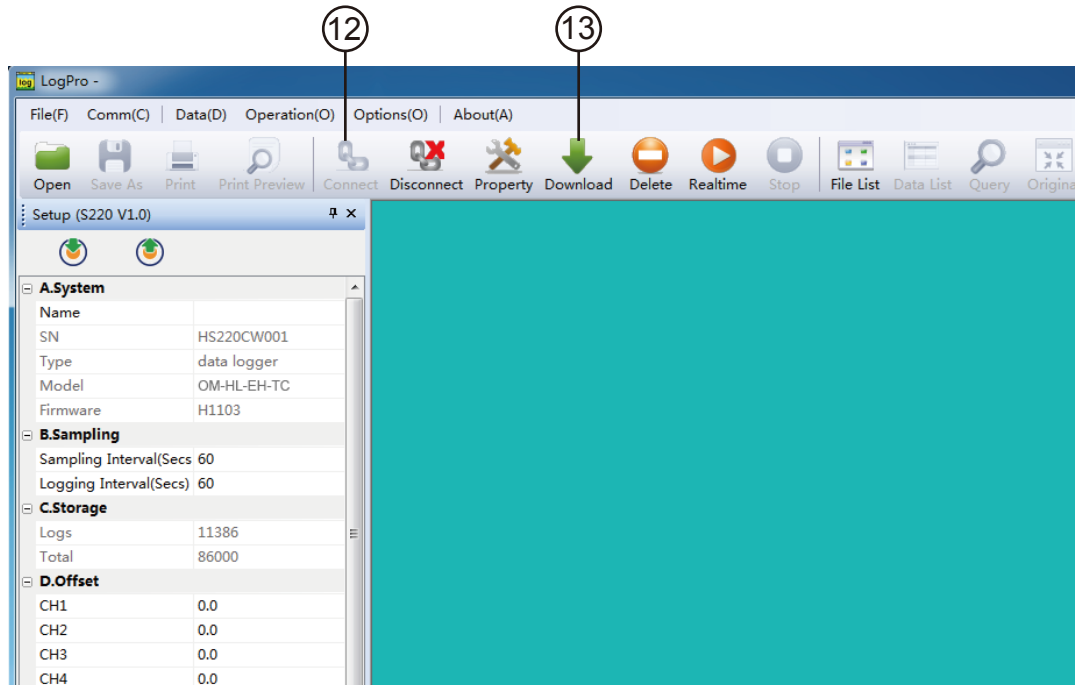


Once the data is downloaded from the logger to the PC, the log graph will be displayed.

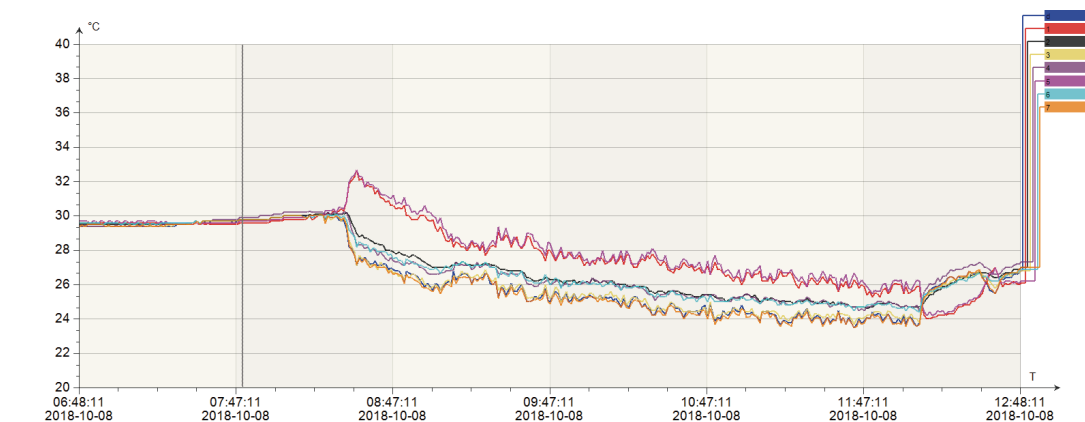

Tips: Press and hold the left mouse button to drag a box, when the left mouse button is released, the graph will be redrawn with the data in the selected rectangle area. Click right button, and then the graph will be redrawn with all the data in the logs file.

## Section 2.5 - View Data Sheet

Click “Data List” button on the toolbar, and then the data listing window is shown below.

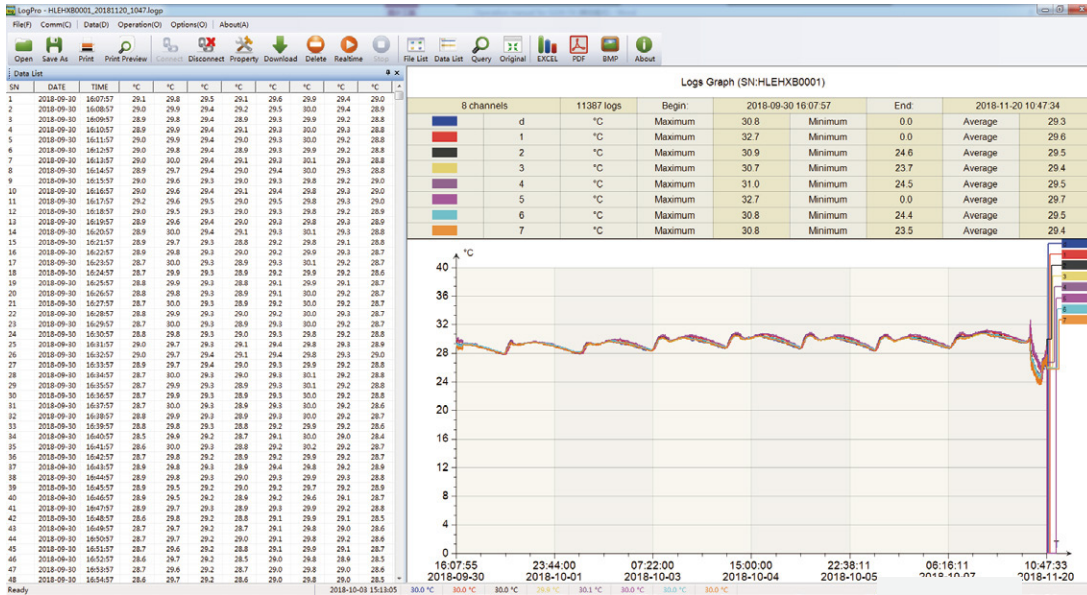

The data pane lists the data samples collected by the logging device. The column width of each column is adjustable by using the left mouse button and dragging the column to the desired width.

## Section 2.6 - Exporting Logs from LogPro

- 
 Export data list to an Excel file.
- 
 Export data list to a PDF file.
- 
 Export graph to a BMP file.

## Section 2.7 - Delete Records in the Logger

14. From the toolbar select Delete.

The screenshot shows the LogPro software interface. The toolbar at the top contains various icons for file operations and data management. The 'Delete' icon, represented by a trash can, is circled with the number 14. Below the toolbar is a 'Data List' table with columns for SN, DATE, TIME, and multiple temperature channels (oC). To the right of the data list is a 'Logs Graph' showing a line chart of temperature data over time. The graph has a y-axis labeled 'oC' ranging from 8 to 40 and an x-axis representing time from 2018-09-30 16:07:57 to 2018-11-21 09:18:32. A legend above the graph identifies 8 channels of temperature data.

## Section 2.8 - Check the Save File in File List

15. From the toolbar select File List.

16. Click to open the file.

- Double click left mouse button, then the selected file is opened.
- Click right mouse button, a popup menu is shown as below, you can rename or delete or log file.
- The saved file is saved in the LogPro software's installation path in the PC's hard driver.

The screenshot shows the LogPro software interface with the 'File List' window open on the left side. The 'File List' window displays a list of files, including 'HLEHXB0001' and 'HLEHXB0001\_20181120\_1047.logp'. The 'File List' button in the toolbar is circled with the number 15. The main window shows the 'Logs Graph' and a summary table for 8 channels of temperature data. The graph shows temperature data over time, with a y-axis labeled '°C' ranging from 8 to 40. The summary table provides statistics for each channel, including maximum and minimum values.

Channel	Unit	Maximum	Minimum	Average
1	°C	32.7	0.0	29.6
2	°C	30.9	24.6	29.5
3	°C	30.7	23.7	29.4
4	°C	31.0	24.5	29.5
5	°C	32.7	0.0	29.7
6	°C	30.8	24.4	29.5
7	°C	30.8	23.5	29.4

---

## Section 3 - Attention

- Plastic shell is ABS, should be retardant, not resistant to acid and alkali.
- If repair is needed, only authorized technician can do the repair.
- The instrument configuration by 9V block battery is not rechargeable.
- USB power supply (4.8V) cannot let the Data Logger work.

---

## Section 4.1 - LCD Screen Dim

Insufficient battery or the environment temperature is too low or too high.

**Solution:** In the case of insufficient battery, please replace the battery. If results from environment temperature, please immediately take the logger out of the environment.

## Section 4.2 - Data & Time Error

Reason:

- The Battery level is low.
- The Data Logger is not synchronous properties, before start recording.

Solution:

- Replace the battery.
- Please sync the properties, before start recording.

## Section 4.3 - Software "Runtime Error"

Reason:

- OS forbid software creating files.

Solution:

- Run the program (software) as an administrator.
- Install software in D or E drive if available.
- A data logger name cannot contain any of the following characters: \ / : \* ? " < > |
- Software's installation path cannot include Chinese character or garbage character.

## Section 4.4 - Check COM Port Number

Press "Win" + "R" in keyboard -> Run "devmgmt.msc" to Open "Device Manager" in Windows-> Expand "Ports (COM & LPT)" -> "USB-serial CH340 (COM No. )" is the Data Logger.